

How to replace **bolt** in Trinut & **nut** in Collar.



Step 1.



1. Hammer out the stripped bolt.




Step 2.

2. Install a new 3/8" diameter bolt by hammering it in the hole. Make sure that it is seated in the casting.



Step 3.

3. Hammer out the stripped nut.

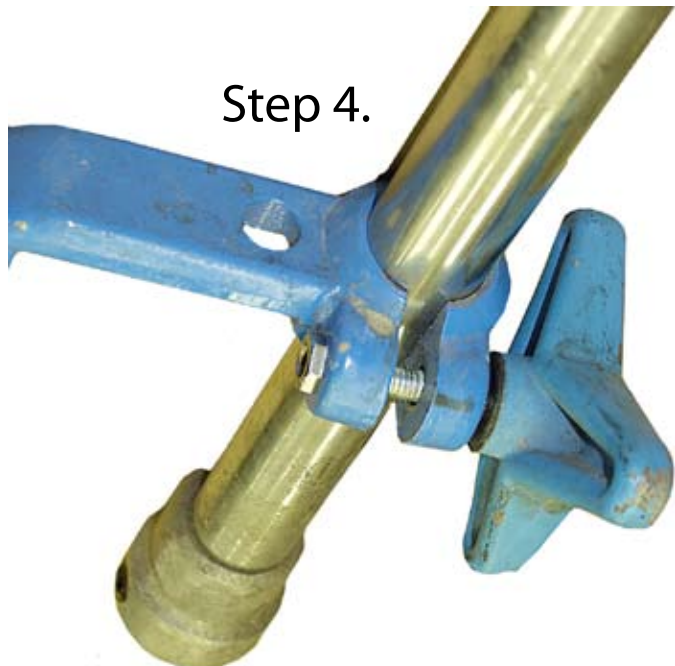

Step 4.

4. Install a new 3/8" nut. Put nut in its socket and pull it in with the newly installed Trinut bolt.