

Swift Burnisher prt#.2W22101 Assembly page 2.

- 1. 2E50027 aluminum bracket
- 2. 6D02202 Nut
- 3. 6A14900 Screw
- 5. 2E50026 Air deflector
- 7. 2E50430 Paper bag
(package of 10pcs)
- 9. 6A10600 Screw, Phillips
- 10. 6D02002 Nut, keps
- 11. 2E50050 Caster
- 12. 6A10600 Screw
- 13. 6D02002 Nut, keps
- 15. 6F21400 Rivet
- 18. 2E50215 Bumper fastener
- 19. 2E93902 Bumper
- 20. 1E66600 Wheel
- 21. 2E50020 Dust seal
- 23. 2E50030 Axle
- 24. 6K02600 Tension washer
- 25. 6K02601 Washer
- 26. 6K02601 Washer
- 27. 6J66800 Hub Cap & Nut
- 30. 2E50098 Spacer
- 31. 7A96001 Sq. Key
- 32. 6K02407 Washer 1-3/8"
- 33. 6A37500 Mach.screw 5/16"
- 35. 2E50096 FlexDrive 20" assy. consist of:
 - e. 35. 9M50096 Flex drive
 - f. 37. 2A80204 Thin (black) washer
 - g. 38. 2A80215 Center-lock assy.
 (Center-lock screw & its base sold as a pair)

